

# GLOCK® PERFORMANCE TRIGGER

Important information

## WARNING:

This product must be installed by a certified GLOCK® Armorer.



PERFECTION

To ensure optimal performance, GLOCK recommends lubrication using a quality CLP oil or equivalent prior to first use, and before and after each subsequent use of the GLOCK Performance Trigger. When the trigger is not used on a regular basis, but is a part of your everyday carry, lubrication should be applied every three months.

Please note that the GLOCK Performance Trigger remains in the “forward” position whether or not the firearm is loaded. If the trigger does not return to its forward position, or if there is any perceived performance degradation or elevated trigger pull, please ensure your firearm is unloaded and reference the “cleaning” section on the reverse side of this card. If cleaning the trigger group does not provide a solution, please contact GLOCK Technical Services.

[us.glock.com](http://us.glock.com)

## Cleaning and Oiling your GLOCK® Performance Trigger

**Cleaning:** Field strip the pistol into its main components according to your GLOCK® Safe Action Pistol “instructions for use” manual.

*Note: The use of safety glasses is required to perform the following functions.*

- Spray the installed trigger group with a quality cleaner such as ID-Red/Gun Scrubber
- Let the cleaner dry off
- Apply oil to appropriate areas as outlined on the right

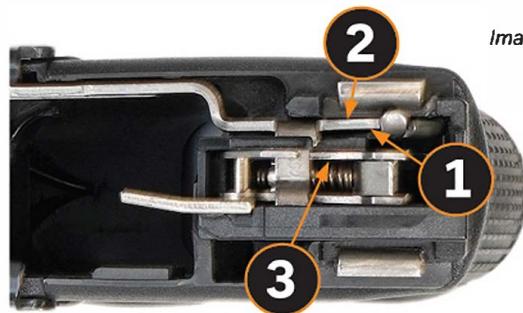


Image 1.1

**Oiling:** Apply one drop of oil to the following areas (*Reference Image 1.1*):

1. Between the trigger bar and connector
2. Between the trigger bar and frame
3. On top of the sear holder

[us.glock.com](http://us.glock.com)